



MAINS TESTER

64510 - 4171D INSTRUCTIONS

- Testing range 120 - 250V/AC
 - Place blade end into live aperture of socket and press your thumb against metal cap on handle.
 - If supply is live, the neon bulb in the handle will light.
 - Tester will not illuminate if placed in contact with neutral terminal, or if supply is dead.
 - Always check bulb is working by using tester first on a live circuit.
 - Do not use tester as a screwdriver or lever as this will damage the tester
-
-