

Programming your Sky remote control

The Sky remote control can also operate the basic TV functions (Channel changing / volume control / Text etc) on around 90% of TV manufacturers. The 4 digit code (Shown in your Sky handbook) is used to identify the make and manufacturer of your TV. The individual 3 digit codes are used for each manufacturer.

To program your Sky remote control using the 3 digit code.

1. Switch on the TV set
2. Press the TV button on the Sky Remote
3. Hold down the **Select** and **Red** buttons for 2-3 seconds until the LED blinks twice
4. Enter the 3 digit code
5. Press the **Select** button to store

Press TV and any number to test, If this does not operate the TV set try below.

To program your Sky remote control using the 4 digit code

1. Switch on the TV set
2. Press the TV button on the Sky Remote
3. Hold down the **Select** and **Red** buttons for 2-3 seconds until the LED blinks twice
4. Press the TV button on the Sky Remote again
5. Enter the 4 digit code for your make of TV
6. The LED should blink twice, if not recheck the 4 digit code used and go back to 1
7. Press the standby button on the Sky Remote (The TV should go to standby)
8. Press the **Select** button to store

If the TV does not go into standby press the TV button then the standby button, then TV then standby, keep repeating this until successful. This will scan the codes used for a particular make of TV.

Programming the Sky Remote control to view Sky on an RF channel

Most installations comprise of a Scart connection from the Sky receiver to the TV. This is normally activated by pressing the Sky button for viewing Sky. For installations where the use of a Scart lead is not possible the Sky button on the remote can be set to instruct the TV to go to channel 6 (Or any channel that Sky is normally viewed on) and switch on the Sky receiver.

1. Press the TV button on the Sky Remote
2. Hold down the **Select** and **Green** buttons for 2-3 seconds until the LED blinks twice
3. Enter the program number for the TV channel which Sky is normally viewed on
4. Press the **Select** button to store, the LED should blink twice

Now you only need press the Sky button to view Sky on your chosen TV channel.

Remote Codes

Brand Name	Brand Code	Codes
Acura	891	009
Admiral	0182	115, 191, 241
Adyson	0035	245
AGB	0010	544
Aiko	0038	297
Akai	0098	389, 236, 544, 065, 508, 219

Akito	0892	300
Akura	0042	246, 292, 397, 065, 440
Alba	0043	037, 065, 246, 399, 263, 064, 446
Allorgan	0050	322
Amplivision	0062	245, 428
Amstrad	0063	205, 440, 065, 399, 382, 037, 199, 461, 544, 390, 397, 050
Anitech	0070	037, 096, 104
Arcam	0077	243, 244, 245
ArcEnCiel	0894	596
ASA	0014	098, 132, 115
Asberg	0895	104
Asuka	0094	246
Atlantic	0896	234
Audiosonic	0103	065, 137
Autovox	0108	104, 115, 234, 364, 572
Baird	0117	137, 221, 3 1, 218, 220, 236, 100
Bang & Olufsen	0118	593, 115, 114
Barco	0119	444
BasicLine	0121	037, 246
Baur	0122	331, 563, 540, 582, 389, 572, 533, 038, 065
Beko	0125	0065, 0081, 514, 398, 0742, 742, 0743, 720
Beon	0899	065, 060, 446
Binatone	0131	245
Blaupunkt	0133	582, 563, 219, 223, 228, 241, 329, 355, 356, 346
Blue Sky	0134	246
Blue Star	0136	310
Bondstec	0138	275
Boots	0139	300, 245, 060
BPL	0115	310, 065
Brandt	0143	233, 361, 224, 226, 315, 363, 327, 596, 137
Brandt Electronic	0900	596
Brionvega	0147	115
Britannia	0149	244
Bruns	0152	115
BSR	0116	322
BTC	0898	246
Bush	0157	246, 263, 377, 037, 064, 065, 310, 300, 383, 399, 391, 402, 339
Carrefour	0189	064

Cascade	0902	037, 065
Cathay	0903	065
Centurion	0904	065
Century	0197	115, 241, 275
CGE	0162	102, 112, 334, 104, 275, 280, 446, 398
Cimline	0202	037
Clarivox	0905	065
Clatronic	0205	246, 292, 398, 399, 245, 104, 275, 065, 446, 398
Clayton	0206	413
Condor	0218	348, 398
Contec	0222	244, 037, 185, 039, 064
Continental Edison	0223	137, 224, 226, 427, 361, 515, 596
Crosley	0074	115, 275, 102, 112, 280, 104, 191, 241
Crown	0225	037, 398, 514, 104, 449, 065, 397, 387, 607, 446
Crystal	0906	456
CS Electronics	0163	244
CTC	0901	275
Cybertron	0228	246
Daewoo	0092	037, 065, 402, 244, 402, 527, 245, 246
Dainichi	0237	244, 246, 243
Dansai	0238	065, 244, 060
Dayton	0241	037
Decca	0244	065, 100, 544, 300, 277, 245, 272, 077
DeGraff	0243	236, 255, 391, 576, 072
Dixi	0254	037, 065
Dual	0257	572, 547, 380, 364
Dual Tec	0907	245
Dumont	0256	115, 098
Durabrand	0042	0042
Elbe	0295	287
Elin	0273	065, 576
Elite	0274	246, 348
Elta	0275	037
Elonex		063
Emerson	0263	205, 241, 115, 275, 065, 399, 098
Erae		1234
Erres	0283	040, 065
Europhon	0287	065, 544, 342
Evesham		0065
Expert	0909	234

Ferguson	0293	101, 363, 221, 218, 033, 315, 137, 266, 371, 220
Fidelity	0294	244, 221, 460, 400, 544, 389, 391
Finlandia	0296	374, 387, 236, 391
Finlux	0297	132, 133, 065, 374, 245, 100, 104, 544, 098, 115, 207
Firstline	0298	322, 349, 244, 402, 275, 037, 245
Fisher	0154	132, 236, 185, 245, 331, 398, 572, 583
Flint	0910	483
Forgestone	0299	221
Formenti	0301	115, 241, 244, 065, 348
Frontech	0308	275, 292, 191, 391, 459, 476
Fujitsu	0313	234, 100
Funai	0179	292, 322, 207, 331
GEC	0319	071, 100, 549, 233, 544, 065, 245, 585
Geloso	0327	037, 241
Genexxa	0330	246, 065, 191, 440
GoldStar	0056	065, 405, 318, 245, 275, 037, 060, 391, 137, 459
Goodmans	0335	065, 064, 100, 285, 037, 292, 544, 207, 318, 363, 399, 402, 515
Gorenje	0336	398
GPM	0321	246
Graetz	0339	191, 389, 585
Granada	0340	387, 391, 544, 229, 072, 065, 236, 174, 245, 073, 367
Grandin	0342	310
Grundig	0345	563, 582, 515, 098, 233, 219, 223
Hanseatic	0353	065, 389, 572, 348, 456
Hantarex	0354	544
Harwood	0361	285, 037, 065, 060, 440
HCM	0347	037, 310, 440
Hifivox	0911	596
Hinari	0365	037, 064, 207, 246, 263, 515, 383, 392
Hisawa	0368	310, 428, 483
Hitachi	0145	253, 384, 377, 173, 606, 591, 509, 065, 071, 072, 064, 060, 133, 137, 224, 226, 245, 255, 191, 334, 391, 549, 576, 585
Huanyu	0912	244, 402
Humax	1323	
Hypson	0374	065, 292, 310
Hyundai		yundai, 0863
ICE	0378	245, 292, 399

IceS	0913	246
Imperial	0387	065, 275, 398, 112, 446, 398, 498
Indesit	0388	339
Indiana	0914	065
Ingelen	0915	191, 585
InnoHit	0916	100, 544
Interbuy	0393	
Interfunk	0394	065, 191, 275, 389, 540, 585, 596
Intervision	0397	245, 065, 096, 130, 292
Isukai	0398	246
ITS	0383	399
ITT	0384	576, 191, 339, 549, 572, 585
JVC	0053	681, 081, 122, 399, 221, 218, 220, 064
Kaisui	0409	246, 310, 065, 244, 245, 037
Kapsch	0917	234, 191, 585
Kathrein	0411	584
Kendo	0414	065, 263, 390
Kingsley	0418	244
Kneissel	0421	287, 463
Korpel	0423	065
Korting	0424	115
Koyoda	0918	037
Leyco	0434	292, 065, 100, 322
Lexor	0150	136, 0150, 5791
LG	0065	065, 244, 405, 318, 037, 398, 191, 459, 245, 389, 060, 275, 0206, 0584, 0742, 0851, 1165, 1176, 1208, 1219, 1280, 1293, 1665
Liesenk & Tter	0919	065
Lloyton	0441	060
Loewe	0442	540, 115, 103, 065
Logik	0221	033, 039, 061, 111, 221
Luma	0447	234, 391
Luxor	0452	222, 391, 377, 384, 389
Magnadyne	0461	115, 130, 275, 544, 572
Magnafon	0462	544, 241, 104, 130, 342
Manesth	0467	065, 263, 245, 292, 348,
Marantz	0128	065, 584
Marelli	0471	115
Mark	0472	065
Matsui	0477	263, 205, 037, 383, 471, 039, 100, 065, 515, 239, 245, 382, 322, 461, 300, 607, 544, 399, 461, 063,

		208, 219, 223, 297, 498, 391, 459, 572, 288, 477
McMichael	0481	071
Mediator	0483	065, 040, 584
Melectronic	0453	374, 065, 137, 133, 132, 402, 037, 245, 096, 508, 191, 315
Memorex	0037	037
Memphis	0489	365
Metz	0491	115, 241, 303, 395, 416, 563
Minerva	0494	515, 563, 582, 098
Minoka	0921	397, 387, 412
Minstral	0922	221
Minstral Electronics	0923	221
Mitsubishi	0150	136, 178, 382, 064, 221, 065, 061, 540, 115, 563
Mivar	0500	320, 544, 244, 318, 319
Motion	0503	104
MTC	0185	377, 540
Multitech	0508	391, 037, 244, 130, 104
National	0521	477, 242
Neckermann	0524	065, 219, 398, 584, 582, 115, 241, 377, 391, 533
NEI	0514	065, 365, 459
Nesco	0525	207
Nicam	0924	572
Nikkai	0528	060, 064, 037, 245, 063, 065, 100, 244, 246, 292, 365, 104, 130
Nobliko	0535	104, 130
Nogamatic	0925	596
Nokia	0536	389, 508, 576
Nordmende	0537	137, 315, 427, 224, 371, 226, 241, 327, 339, 596
Oceanic	0540	243, 191, 389
Onwa	0544	461
Ovion	0549	322, 383, 263, 205, 039, 065, 053, 205, 348, 349, 392, 544, 572
Osaki	0550	100, 440, 300, 245, 060, 285, 246, 292, 297, 402
Oso	0551	246
Osume	0552	060, 100, 185
Otake	0553	345
OttoVersand	0554	038, 064, 533, 065, 219, 241, 245, 348, 371, 377, 540, 563, 582, 584
Pacific	065	742, 0063, 0065, 0471, 0584, 0743
Palladium	0560	398, 391, 446
Panama	0562	037, 245, 292

Panasonic	0051	678, 254, 278, 154, 242, 241, 368, 128, 191, 368, 395, 585
PatheCinema	0567	191, 266, 244, 241, 348
PatheMarconi	0568	233, 241, 224, 226, 301, 596
Pausa	0569	037
Perdio	0572	065, 191, 297, 348
Phase	0926	060
Philco	0030	115, 112, 102, 104, 241, 275
Phillips	0081	584, 065, 040, 041, 582, 221, 115, 071, 351, 402
Phoenix	0574	348, 115, 297
Phonola	0575	065, 584, 040, 041, 115
Pioneer	0166	065, 137, 191, 194, 315, 5090
Prandoni Prince	0927	544
Profex	0590	037, 389, 104, 391
Proline	0592	349, 100, 054, 065, 040
Protech	0595	065, 245, 037, 275, 377, 130, 292, 365, 446, 459
Pye	0600	584, 065, 040, 041
Quelle	0604	065, 038, 039, 533, 540, 563, 572, 582, 098, 102, 112, 228, 241, 280, 334, 355, 356, 389
Questa	0863	060, 064
Radiola	0611	065, 584, 040, 351
Radiomarelli	0612	115, 229, 544
Rank Arena	0928	064
RBM	060	098
Rediffusion	0617	229, 389
Revox	0621	065, 398
Rex	0622	234, 191, 287, 292
RFT	0608	115, 456
R-Line	0605	065
Roadstar	0625	037, 292, 246, 446
Saba	0645	315, 241, 103, 115, 191, 137, 544, 371, 224, 226, 327, 363, 233
Saccs	0929	266
Saikou	0648	285
Saisho	0649	039, 205, 263, 544, 037, 061, 288, 239, 292, 382, 459, 572, 245
Salora	0651	391, 576, 389, 191, 222, 377, 384, 387, 389
Sambers	0652	241, 544, 104, 130, 342
Samsung	0060	065, 584, 037, 245, 476, 398, 516, 292, 318, 037, 0646
Sandra	0654	244

Sanyon	0159	236, 073, 100, 064, 174, 185, 367, 039, 245, 246, 398, 241
Saville	0662	051
SBR	0635	065, 584, 040, 041, 071, 221
Schaub Lorenz	0664	389, 585
Schneider	0665	065, 040, 331, 572, 422, 364, 351, 380, 245, 246, 275, 399, 041
SEG	0636	245, 292, 064, 104
SEI	0637	115, 130, 038, 205, 241, 322
Sei-Sinudyne	0930	038, 544, 572
Seleco	0672	234, 191, 267, 390, 439
Sense	0699	065
Sentra	0674	063, 246, 037
Sharp	0093	121, 064, 065
Shorai	0677	322
Siarem	0679	544, 191, 115, 130, 241
Siemens	0680	219, 563, 582, 228, 223, 329, 241, 355, 356, 185, 065
Silver	0864	064, 389, 207
Singer	0688	115
Sinudyne	0689	205, 115, 263, 130, 241, 322
Skantic	0690	384
Solavox	0695	191, 100, 576, 060
Sonitron	0698	236, 398, 367
Sonoko	0699	037, 065
Sonolor	0931	236, 191, 243
Sontec	0700	065, 398
Sony	0000	533, 038, 039, 064
Soundwave	0702	446, 065
Standard	0707	246, 037, 245
Stern	0719	234, 287, 191
Sunkai	0721	322, 383, 349, 054
Susumu	0729	246, 363
Sysline	0932	065
Tandy	0741	246, 100, 245, 191
Tashiko	0745	191, 064, 387, 245, 060, 391, 285, 174, 071, 244
Tatung	0049	065, 100, 544, 300, 277, 245, 272, 077
Tec	0746	245, 275
Technema	0933	348
Technics	0250	278, 678
Technika	0054	065, 0065, 0335, 0649

TechnoAce	0934	207
Teleavia	0755	137, 233, 361, 371, 518, 596
Telefunken	0757	137, 594, 499, 102, 112, 129, 363, 280, 290, 334, 101, 371, 241, 033, 505, 526, 596
Telemeister	0760	348, 065
Teletech	0762	037, 065
Teleton	0763	234, 245, 377, 391
Tensai	0767	132, 246, 065, 322, 345, 348
Texet	0935	244, 246, 037, 402
Thomson	0771	363, 315, 427, 137, 361, 224, 226, 327, 371, 065, 518, 596, 377
Thorn	0772	101, 221, 220, 218, 527, 065, 521, 402, 540, 063, 100, 102, 112, 132, 533, 563, 581
Thorn-Ferguson	0936	371
Tomashi	0774	310
Toshiba	0156	536, 581, 063, 271, 098
Triumph	0786	271, 205, 544
Uher	0792	234, 348, 331
Ultra	0793	220
Ultravox	0794	115, 130
Universum	0802	374, 133, 563, 520, 398, 065, 132, 292, 449
Vestel	0808	065
Videosat	0937	275
Videotechnic	0938	245
Videoton	0939	459
Vision	0941	065, 348
Visorex	0818	460
Voxson	0820	115, 191
Waltham	0821	245, 384
Watson	0822	065, 348
Watt Radio	0823	130, 342, 572
Wega	0825	064, 115
White Westinghouse	0830	348, 244, 065
Yoko	0840	292, 065, 245, 459
Zanussi	0843	234, 391, 245