



Technology...since 1937


www.antiference.co.uk

Thank you for purchasing this Clear Flow media & data cabinet. Please read the following assembly instructions carefully & retain for future reference.

Cabinet Assembly Instructions

Contents

- 1x Top panel with fan mounting hole
- 1x Bottom panel
- 2x Clip-in sides
- 1x Back panel with wall mounting holes
- 1x Front panel with slots for door
- 1x Glass door with lock
- 2x Keys for door
- 4x Side mounting rails for uprights
- 4x Upright mounts for equipment with number markings
- 2x Cable entry hole covers
- 1x Fan mounting hole cover
- 16x Black 10mm bolt & nuts for cabinet assembly
- 4x Silver M4 bolt & nut for cable entry cover
- 4x Silver M5 bolt & nut for fan mounting
- 8x Cage nuts & bolts
- 1x Silver door pin

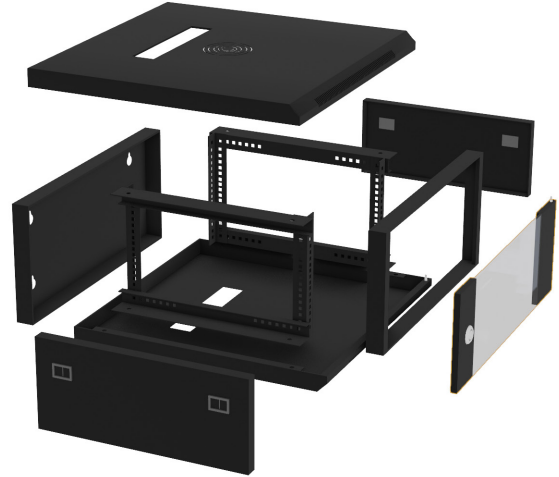

Step 1

Before you begin to assemble the cabinet, if you know the position of the uprights, the cage nuts can be fitted now. There are 7 different positions for the front and back uprights. These nuts can be fitted later if required.



Step 2

Using the small black assembly nuts and bolts provided, bolt the side rails onto the top and bottom sections of the cabinet. Fit the nuts on the inside.



Top



Bottom



Step 3

Attach the back panel with black assembly nuts & bolts taking care to ensure the back is the correct way up for the keyhole mounts to be used to fix the cabinet to the wall.

Step 4

Fit the front panel in the same way ensuring the single large slot is facing the front as this is the latch slot where the lock will eventually engage with. The double slots face backwards as these are there for the side panel to engage with once the assembly is complete.





Step 5

Fit the top panel (with fan mounting hole) to the assembly and bolt with assembly nuts and bolts in each corner

Step 6

Screw in the upright equipment rails with the cage bolts front and back on both sides ensuring the numbers are the correct way up.

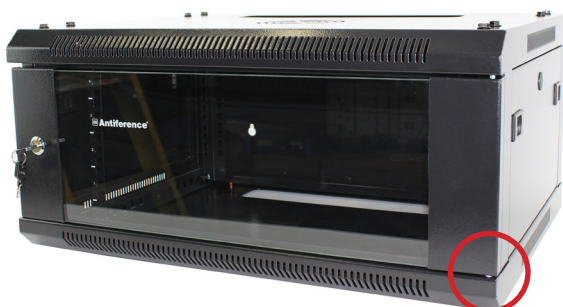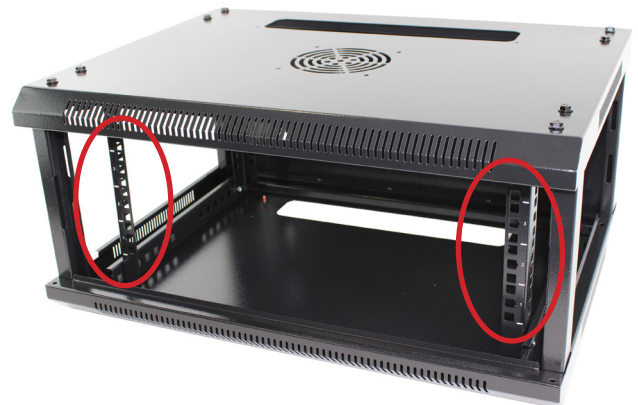

Step 7

Fit the small silver pin into the hole in the bottom corner of the front panel and fit the door by resting on the silver pin and using the spring clip at the top to fit into place. Slot the side panels in from the bottom and spring clip the sides into place.