

## Parameters

Electric Parameters:	
BUS Power Supply	DC24V
Communication interface	RS485
Environmental Conditions:	
Working Temperature	-5°C~45°C
Working relative Humidity	Up to 90%
Storage Temperature	-20°C~+60°C
Storage relative Humidity	Up to 93%
Approved	
CE	
RoHS	
Production Information:	
Dimensions	86×116.5×26.5(mm)
Weight	121.5(g)
Housing material	Steel, ABS
Installation	US Wall Box
Protection	IP20

## Important Notes

- Bus cable - HDL Buspro/KNX cable, 0.8mm single-core copper cable.
- Bus Connection - Series connection (hand-in-hand).
- It must work in conjunction with panel or sensor.

## Installation Step

- Connect bus cables. Make sure the color of wire complies with the definition.
- Make sure the Bus cable type is correct and has no short circuit
- Mount the HDL-MPPI.46 in the wall-box
- Put other device into HDL-MPPI.46

## Overview



**HDL-MPPI.46** Panel switch power docking base provides the DC power and communicates with the panel switch signal, it supports different new generation on wall mount switches and wall mount new sensors.


## Functions

- This docking base is the universal base for different switches.
- It has the HDL Buspro interface. It must work in conjunction with panel or sensor

## HDL Buspro Definition for Cable

HDL Buspro	HDL Buspro/KNX
DC24V	Red
COM	Black
DATA-	White
DATA+	Yellow

## Dimensions and Wiring

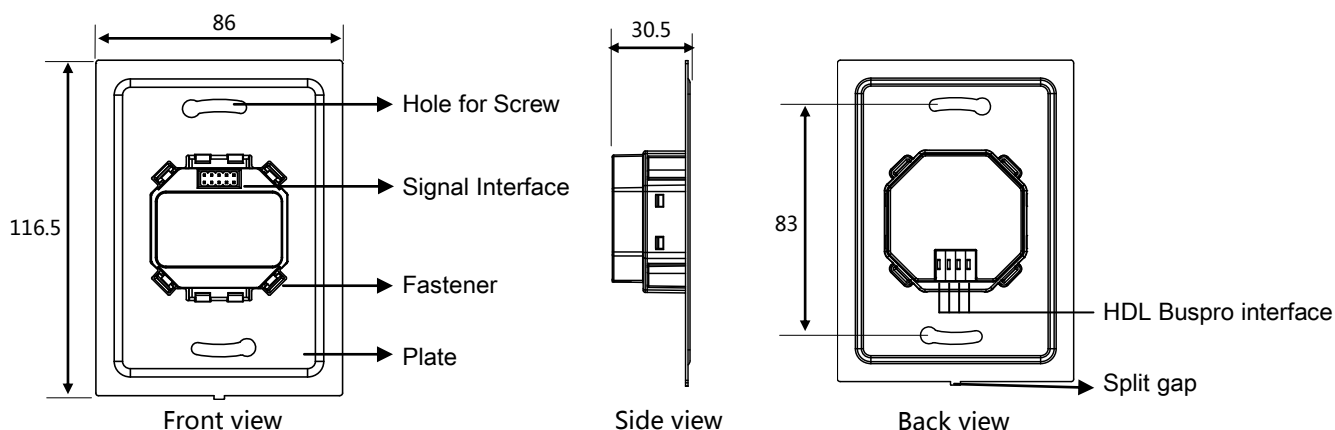


**Signal Interface and fastener:** To be connected with the panel switch or sensor.

**Hole for Screw:** Fix the docking base into the back box.

**Split gap:** Insert a slotted screwdriver to split gap, separate the panel and power interface module (MPPI.46).

## Installation

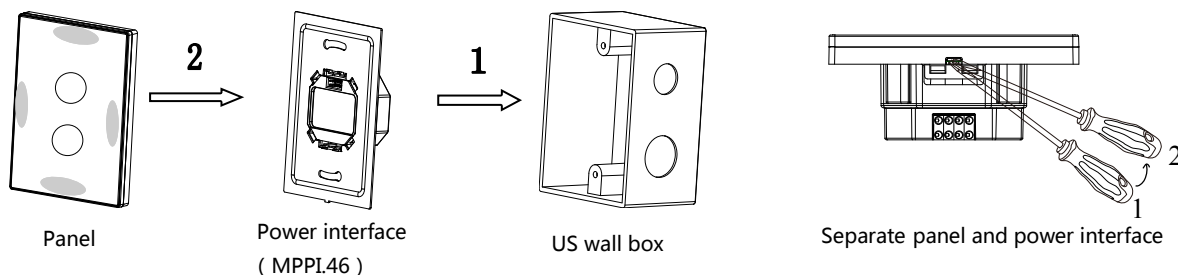

**Installation:** Hold the edge of panel (shown as above), insert the power interface module (MPPI.46) vertically. Do not push the panel too hard.

**Split:** Insert a 2.5mm-screwdriver to the split gap, pry up from position 1 to 2, wiring hole will open. Then separate the panel and power interface module (MPPI.46).

## Safety attention



- The screw down strength should not exceed 0.1Nm
- It must work in conjunction with panel or sensor
- Do not make wrong connection on Bus interface, it will damage the Bus interface of this module
- Never let liquids get into the module, it will damage this device
- Do not get AC power into Bus wire , it will damage all devices in the system